Maintenance and Operation Guide

Paired Panels Partition



SIGNATURE 842

(automatic bottom seals)



EXCEL 742 CRYSTAL 242

IMPORTANT:Read this manual carefully. It contains information pertaining to your safety and the safety of others. In order to safely operate this partition you must become familiar with all components, their function as well as train others who may be involved in its operation.

Contents

Safety Precautions	2
Maintenance	3
Operation	4-5
Pass Door operation	
"U" shape Pass Door	6
"L" shape Pass Door	
Warranty	8

Safety Precautions



IN ORDER TO PREVENT DAMAGE OR OTHER PROBLEMS YOU MUST:

- Moderco wall systems are engineered & manufactured to operate easily & with a minimum of force.
- Designate & train specific individuals in their movement, set-up & care emphasizing responsibility & care.
- It is dangerous for children, or any unqualified person, to operate moveable walls.
- All hands, fingers & other objects should be kept clear of all panel-meeting edges.
- With pass-door panels, never attempt to move panels with acoustic seals in their extended position.
 To do so will result in damage & loss of acoustic control.
- Clear the path beneath the ceiling track through which panels will move.
- Always move panels at a walking pace, one group at a time.
- All panel pass doors must be closed & secured when panels are relocated
- The children you may have seen on the Moderco video, the brochures or the CD ROM were under constant adult supervsion. Their participation was for publicity reasons only.
- Moderco Inc. is not and will not be liable for any bodily, material or other damages suffered in case
 of negligent or careless use of its products.

This set of instructions deals with routine but necessary operational techniques as well as day-to-day care & maintenance instructions for your Moderco Operable Wall Systems. It is highly recommended that you follow all suggestions noted in order to ensure many years of trouble free operation.



Maintenance

♠ WARNING

Moderco wall systems are engineered & manufactured to operate easily & with a minimum of force. Designate & train specific individuals in their movement, set-up & care emphasizing responsibility & care.

AFTER INSTALLATION THIS FOLDING PARTITION REQUIRES VERY LITTLE MAINTENANCE.

1. Should some roughness develop in the supporting track when moving the panels, wipe off the inside of the bottom lips of the track with a rag.

2. If it is necessary to clean the panel surfaces, use warm water and soap, with a soft scrubbing brush.

Avoid chemical cleaners or strong detergents.

3. Should replacement parts be required, or for other information, contact your nearest Moderco distributor. Refer to our web site www.moderco.com



It is dangerous for children, or any unqualified person, to operate moveable walls.

 


Operation: Panels stacked against the wall (no pocket)

WITH HINGED CLOSURE PANEL



- 1. OBSERVE ALL SAFETY PRECAUTIONS. (see page 2)
 - 2. Gently slide out first group of panels about 2 m. (6" - 0') from stack bundle.

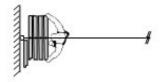

3. Open panels and push on the face of panel to its position in line with track.



4. Gently push panels to far end opposite to stack.

 


5. Once the bottom seal reaches a wall or another panel, push the panels until they pass the pivot point of the bottom seals.



Repeat steps 1 to 5 with each remaining panels.

6. When all panels are in line across room and seals are locked, swing hinged closure panel to closed position in line with all panels.

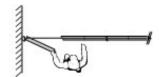




WITH TELESCOPIC CLOSURE PANEL



 - 1. OBSERVE ALL SAFETY PRECAUTIONS. (see page 2)
 - 2. Gently slide out first group of panels about 2 m. (6"-0") from stack bundle.

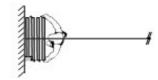

3. Open panels and push on the face of panel to its position in line with track.



4. Gently push panels to far end opposite to stack.



5. Once the bottom seal reaches a wall or another panel, push the panels until they pass the pivot point of the bottom seals.



Repeat steps 1 to 5 with each remaining panels.

FOR THE LAST PAIR OF PANELS

6. See operation 6a to 6e on page 5 (NON ACOUSTICAL POCKET DOORS SELECTION)



 
All hands, fingers & other objects should be kept clear of all panel-meeting edges.

Operation: Panels stacked in a pocket


WITH TELESCOPIC CLOSURE PANEL

With acoustical pocket doors Follow operations 1 to 5 on page 4


6. a) When all panels are in line across room and seals are locked, gently slide out the last pair of panels.

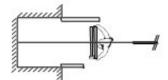

 
b) Close the pocket doors.

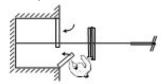

 
c) Unfold the panels and put it in a straight position.

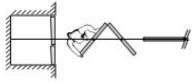

 d) Gently slide it against last panel.

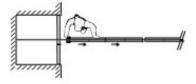

 
 e) Place operating handle into opening on face of panel and turn to expand the telescopic against door to seal folding partition.

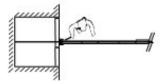


7. To stack folding partition, reverse above steps from 6 to 1.

With non acoustical pocket doors or no pocket Follow operations 1 to 5 on page 4

 
a) When all panels are in line across room and seals are locked, gently slide out the last pair of panels.

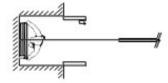

 
b) Unfold the panels and put it in a straight position.

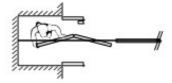

 
c) Gently slide it against last panel.

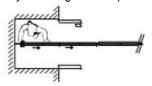

 d) Place operating handle into opening on face of panel and turn to expand the telescopic against wall to seal folding partition.

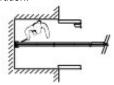

 
e) Close the pocket doors (if applicable).

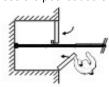


7. To stack folding partition , reverse above steps from 6 to 1 .



"U" Shape Pass Door Operation

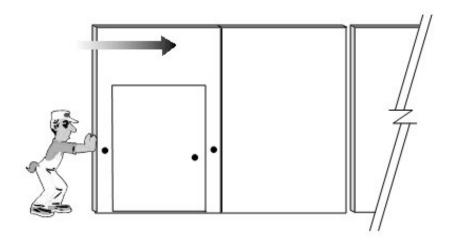


 Step 1: Once the bottom seal reaches a wall or another panel, push the panels until they go past the pivot point of the bottom seal.

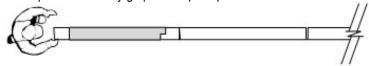


WARNING

 Never attempt to move panels with acoustic seals in their extended position. To do so will result in damage & loss of acoustic control.

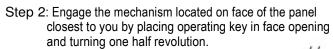



 Step 3: Engage the mechanism located on face of the panel furthest away from you as described in step 2.

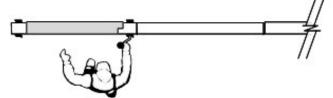


♠ WARNING

The area immediately beneath the track should remain free of objects when panels are being relocated.



"L" Shape Pass Door Operation (Signature 842 only)

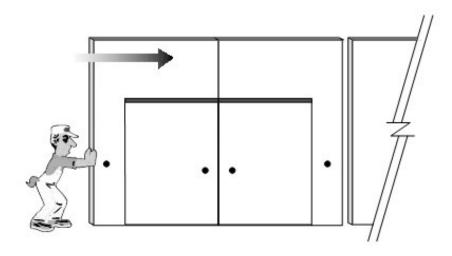


Step 1: Engage the mechanism located on face of the panel closest to you by placing operating key in face opening and turning one half revolution.



All panel pass doors must be closed & secured when panels are relocated



 Step 2: Engage the mechanism located on face of the panel furthest away from you as described in step 1.

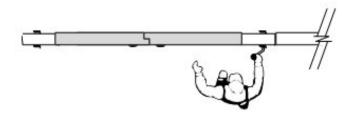



Limited Warranty

SIGNATURE 842 CRYSTAL 242

We, the undersigned, Moderco Inc., do hereby, warrant our product:

The folding partition is guaranteed against warping, buckling, crackling, delaminating for a period of TWO(2) YEARS and the mechanical parts including track and trolleys for a period of FIVE(5) YEARS from the date of signature of the certificate relative to the Final acceptance of work

THIS LIMITED WARRANTY IS SUBJECT TO THE FOLLOWING:

- The owner is to advise Moderco or its authorized representative in writing of any defect in material or workmanship; this applies provided that the product has been used to serve its intended purpose and provided that said defect is not the result of an abusive use.
- This limited warranty will be void if our product has been modified in any way, shape or form since original installation.
- This limited warranty does not hold Moderco or its authorized representative responsible for any damage that should occur to the said property or its content.
- Any obligation or liability not specified thereon shall not be considered our responsibility.

EXCEL 742

We, the undersigned, Moderco Inc., do hereby, warrant our product:

The folding partition is guaranteed against warping, buckling, crackling, delaminating for a period of TWO(2) YEARS and the mechanical parts including track and trolleys for a period of FIVE(5) YEARS from the date of signature of the certificate relative to the Final acceptance of work.

THIS LIMITED WARRANTY IS SUBJECT TO THE FOLLOWING:

- The owner is to advise Moderco or its authorized representative in writing of any defect in material or workmanship; this applies provided that the product has been used to serve its intended purpose and provided that said defect is not the result of an abusive use.
- This limited warranty will be void if our product has been modified in any way, shape or form since original installation.
- This limited warranty not hold Moderco or its authorized representative responsible for any damage that should occur to the said property or its content.
- Any obligation or liability not specified thereon shall not be considered our responsibility.



MODERCO inc.

115, De Lauzon, Boucherville, Québec J4B 1E7

Tel.: (450) 641-3150 / 1 (800) 363-3150

Fax: (450) 641-4965
E-mail: info@moderco.com
Web Site: www.moderco.com

Distributor:			